


## FEATURES:

1. Exclusive Three Prong Torsional Resonator gives accuracy within 5 seconds/month.
2. Chronograph feature with 1/20 seconds, seconds and minutes timing up to one hour. Chrono second hand jumps in 1/8 second intervals (8 times per second).
3. Hour minutes and petite seconds time display. Second hand jumps in 1/2 second intervals (two times per second).
4. Date display.

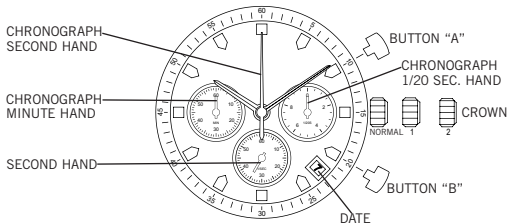

## **A. SETTING THE TIME**

1. Pull the setting crown out to position “2” (See diagram). If the crown has a “screwdown” lock, then unscrew the crown lock first by turning the crown towards you, then pull it to position “2”.
2. Turn the crown to move hands move clockwise until the date changes at approximately midnight.
3. Continue moving the hour and minute hands to the correct time. If it is after noon, turn the hands past 12 o'clock again (noon) to set the correct time.
4. When the correct time is set, push the crown back to the “NORMAL” wearing position.

## **B. SETTING THE DATE**

1. Pull the crown to position “1” (See previous diagram).The watch will continue to run. Turn the crown away from you to advance to the current date.

2. Once the correct date is set, push the crown back to the “NORMAL” wearing position.

NOTE: Do Not set the date as above between the hours of 9:00 PM and 1:00 AM. This may cause the date to be incorrect and the date will have to be reset later.

## **C. CHRONOGRAPH (CHRONO) ADJUSTMENT**

This MUST be done BEFORE using the Chrono the first time. It does not need to be repeated unless the watch receives an impact sufficient to move the hand out of position, or if the battery has been changed.

NOTE: When using the buttons for these adjustments, each button push will move the hand

one step – BUT holding the button down will advance the hand rapidly.

1. Pull the crown out to position “2”.
2. If the Chrono second hand is not positioned at the “0” or 12 o’clock position, push button “A” firmly to adjust the hand correctly.
3. If the 1/10 second hand (small dial at 2 o’clock) is not positioned at the “0” or 12 o’clock position, push button “B” firmly to adjust the hand correctly.
4. Push the crown back to the “NORMAL” wearing position.

#### **D. USING THE CHRONOGRAPH (CHRONO)**

NOTE: The maximum Chrono reading is 60 minutes.

1. Push Button “A” to start the chronograph. Push button “A” again to stop the Chronograph.
2. Push button “B” to return the chronograph to the “Zero” or starting point.
3. The Chronograph can be stopped and started again. Push Button “A”, repeatedly, to “ADD” times together, up to 60 minutes.

#### **HOW TO USE THE TACHYMETER (ON SOME MODELS)**

The Chrono second hand only is used for this function.

**Step 1.** Push and release button “A”, precisely at the start of a measured kilometer (mile).

**Step 2.** At the end of the measured kilometer (mile), push and release button “A” again

**Step 3.** The Hand position, on the numbered scale at the dial perimeter, indicates your speed in kilometers (miles) per hour.

**Step 4.** Reset by pushing and releasing button “B”.

## HOW TO USE THE ELAPSED TIME INDICATOR



If your watch is equipped with a rotatable outer dial with one-minute graduations, this can be used in various ways to check elapsed time. For example if a diver has a 30-minute air supply, he can set the outer ring so that the triangle is in line with the minute hand when he submerges. The minute hand will then indicate on the outer ring the length of time that the diver has been under water.

## SCREW-DOWN CROWN

If your watch includes a screw-down crown, you have additional assurance that it will remain watertight. To make the crown operational, it must be turned toward you until the threads are disengaged. Then, instructions for setting must be followed. To reseal the crown, press in until threads engage. Turn away from you until tight.

## LOCKING PUSH BUTTONS (ON SOME MODELS)

When the watch is submerged, this feature allows you to lock the push buttons for the chronograph so that they cannot be pushed accidentally. To lock the buttons, simply turn the outer collar of the button clockwise until it is fully seated against the button recess in the case. Then, test the button to insure it cannot be pushed in. Reverse the process when needed.

## ABOUT THE POWER CELL

Your new Quartz Watch has a fresh power cell designed to provide maximum reliability for approximately a year under normal use. If the cell is not replaced before it is exhausted, the watch will simply stop. The mechanism should not be harmed in any manner. However, when the power cell becomes exhausted, it should be removed at your earliest convenience to diminish the possibility of leakage. Never store your watch with an exhausted power cell in it. The

watch should be brought to an authorized Bulova dealer for replacement of the power cell. For best performance, the proper power cell should be used.

For certain models with Perchlorate Material – special handling may apply,

See <https://dtsc.ca.gov/perchlorate/>

**Note:** When the crown is in the “OUT” position, the motor and hands stop. Only the quartz crystal continues to vibrate, using very little power. If the watch is to be stored for a length of time, it is recommended that the crown be left in the “OUT” position to prolong battery life. This does not apply to models with two hands only.

### **DEEP WATER LIMITED WARRANTY**

Supplementary and subject to all the provisions and duration of the basic Bulova watch limited warranty, deep sea watches are further warranted not to leak when submerged in water to the depth shown on the dial, provided crystal and crown remain intact and the case has been unopened. In order to assure the preservation of your watch’s water resistance, particularly in those instances where the element of safety is involved, have it checked occasionally by a competent watch technician and serviced or repaired, if necessary.

In addition, the wearer should avoid manipulation of the crown when submerged.

### **WATER RESISTANCE**

Watch models marked only “Water Resistant” on the case back, without additional depth markings are not to be used for swimming. For swimming, models that have the additional marking of “50m,” “100m” or “200m” are recommended.

### **300 METER WATER RESISTANCE (MARKED 300m)**

This product is recommended for recreational use only. The depth in meters shown on the watch does not indicate the diving depth of the watch, but indicates the air pressure used in the water resistance testing of the product in accordance with industry standards.

**BULOVA LIMITED 3-YEAR WARRANTY:** Your new Bulova timepiece is warranted only to the original owner by Bulova for 3 years from date of purchase. The warranty only comes into force if the warranty card is fully and correctly completed by an Authorized Bulova dealer at the time of purchase and/or you provide original proof of purchase. Coverage: The warranty covers parts of the watch that have failed due to original defects in materials or workmanship under normal use, or, Bulova at its option, will replace the watch with a comparable watch. This warranty does not cover: 1. Periodic Service and Maintenance for Mechanical Bulova watches; 2. Damage resulting from improper handling, abnormal use, alteration, negligence or lack of care of the watch; 3. Normal wear and tear and aging including deterioration and scratches to the watch finish (case, bracelet, crown or crystal); 4. The battery, crystal or strap; 5. Water damage if the model is not marked "water-resistant" and moisture or water damage to watch which are improperly resealed after opening of the case; 6. Improperly or incorrectly performed Service and Maintenance, repairs or servicing voids the warranty. Any Service and Maintenance, repairs or servicing which requires opening of the case, must be performed by a properly qualified technician, preferably an Authorized Bulova Dealer or by Bulova.

All implied warranties, including any implied warranty of merchantability are limited to the duration of the expressed limited warranty. Bulova is not liable for any consequential or incidental damages and any recovery may not exceed the amount paid for the watch. This warranty gives you specific legal rights; you may also have other rights which vary from jurisdiction to jurisdiction, so the limitations in this warranty may not apply to you.

**IF SERVICE IS REQUIRED:**

Bulova timepieces have been engineered to provide years of use with minimal need for service. In the unlikely event that service is needed, first have the battery tested to be sure it still has

sufficient power. If this does not correct the problem, depending on the place of purchase of your timepiece, follow the appropriate repair instructions below.

**Packaging and Mailing Instructions:** Send the watch in a durable box with protective wrapping to protect against shock, with postage prepaid and insured for the full replacement value to the address listed below depending on your location. The watch must be presented along with a duly completed warranty card and/or copy of your original proof of purchase. Include information regarding the service or repair requested with your name, address, phone number and email address. For the safety of your watch do not include the words “Bulova” or “Watch” on the outside of the package. Do not send in the original box. To download the Service Form to send in with your watch, look in the Service Center section of our web site at **[www.bulova.com](http://www.bulova.com)**.

### **POST-WARRANTY SERVICE:**

Bulova’s staff of watchmakers are expert at repairing and restoring Bulova timepieces. For repairs outside of warranty, an estimate detailing such cost will be mailed or emailed to you prior to proceeding with repair. Chargeable work will not be commenced until Bulova has received your approval. You may authorize Bulova to proceed with the repair by mailing in a check, cash or money order. In the U.S. and CANADA a \$12.00 charge will be assessed to cover evaluation, postage and handling for post warranty repair estimates that are refused and for repairs not covered under the warranty terms.

### **SERVICE ADDRESSES:**

FOR WATCHES SOLD IN THE U.S. ONLY:

Send to: Service Department, 26-15 Brooklyn Queens Expy, Woodside, New York 11377

FOR WATCHES SOLD IN CANADA ONLY:

Send to: Service Department, 39 Casebridge Court, Toronto, Ontario, Canada M1B 5N4

FOR WATCHES SOLD IN COUNTRIES OTHER THAN THE U.S. OR CANADA:

Departamento de Servicio, Magdalena 211, Piso 2 Col. del Valle, C.P. 03100 Mexico, D.F.

Tel: 55 43 58 00

United Kingdom Service Centre, 8 Woodshots Meadow, Croxley Green Business Park,

Watford, Hertfordshire WD18 8YU

Please check our website **[www.bulova.com](http://www.bulova.com)** for operating instructions in additional languages and for global service center locations.